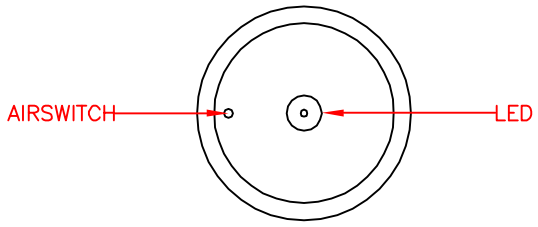

TOP VIEW:

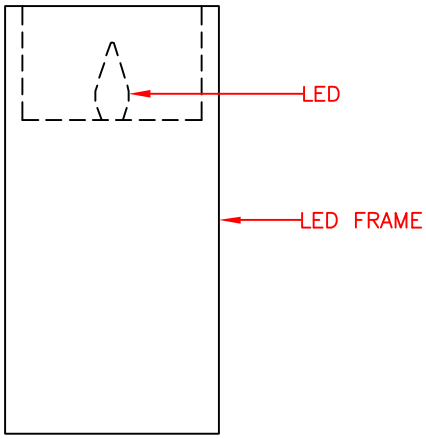

FRONT VIEW:

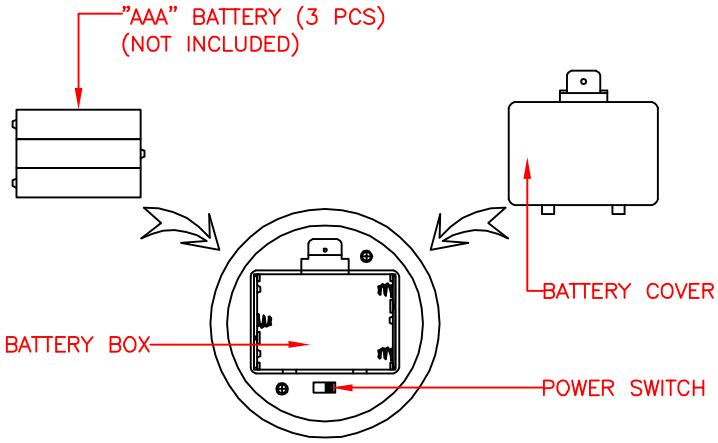

BOTTOM VIEW:

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THE CANDLES SHOULD TAKE APPROXIMATELY 10 MINUTES TO ASSEMBLE.

UNPACK THE CANDELS

YOU SHOULD HAVE RECEIVED (3) CANDLES IN THE PACKAGING.

ASSEMBLY INSTRUCTIONS

1. REMOVE BATTERY COVER FROM BOTTOM OF CANDLE FRAME.

2. INSTALL (3) "AAA" BATTERIES (NOT INCLUDED) INTO BATTERY BOX AS SHOWN.

3. REPLACE BATTERY COVER TO BOTTOM OF THE CANLE FRAME.

4. FLIP ON AT POWER SWITCH.

5. THE AIRSWITCH TURNS LED ON/OFF WITH A "PUFF" OF AIR.

6. IT CAN BE PLACED IN ANY DRY LOCATION TO ENJOY.

CLEANING:

WIPE SLIGHTLY WITH SOFT CLOTH WITHOUT ANY EXCESS MOISTURE. DO NOT USE THE CLEANING LIQUID AVOIDING TO THE SURFACE DAMAGE OF CANDLE FRAME. ESPECIALLY DO NOT IMMERSE IN WATER OR OTHER LIQUIDS AS THIS WILL DAMAGE THE BATTERIES AND THE CANDLE LIGHT.

CAUTIONS:

- DO NOT LEAVE THE CANDLE LIGHT OUTDOORS. IT IS NOT WATERPROOF AND CAN BE DAMAGED BY RAIN, HUMIDITY, LONG EXPOSURE TO SUNLIGHT, AND EXTREME TEMPERATURES.
- KEEP YOUR CANDLE LIGHT AWAY FROM FIRE AND HIGH TEMPERATURES.
- DO NOT PUT THE CANDLE LIGHT IN ANY LIQUIDS.
- CHOKING HAZARD–SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

TROUBLE SHOOTING

1. IF CANDLE DOES NOT LIGHT CHECK THAT SWITCH IS LOCATED IN CORRECT POSITION AND THAT BATTERIES ARE NEW AND IN CORRECT POSITION.

2. IF CANDLE STILL DOES NOT LIGHT, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.